



User's Manual

4.3" Portable GPS Navigation
and Multimedia System



P-110

Thanks for using the GPS P- 110!

- We reserves the rights of final interpretation of the manual.
- The manual content is subject to change without notice. Please accept our apology for your inconvenience.
- Please back up your data of the GPS navigator. CNS Marketing (PTY) Ltd. assumes no responsibility for any loss caused by data loss.
- The manual might contain a few mistakes though it has been checked. If mistakes are found, you are welcome to contact Roadmate Customer Service Center, and its Tel is +27 (011) 7816144.

Statement

- Please read the instructions in this manual and use only accessories of CNS Marketing (PTY) Ltd. to avoid unpredicted damage. Failure to follow the instructions will invalidate warranty and might endanger personnel safety, for which CNS Marketing (PTY) Ltd. assumes no responsibility.
- Data of navigation electronic maps might be inconsistent with actual traffic signals due to transportation development. Please follow traffic regulations and signs and drive according to road situation. Operating the GPS navigator device while driving might cause serious accidents. CNS Marketing (PTY) Ltd. assumes no responsibility for accidents and loss due to improper use.
- For information of software update and upgrade, please go to our website www.roadmategps.co.za.
- The pictures in the manual are subject to the material object.

Welcome	1
Chapter I Beginning Use	2
1.1 Appearance	2
1.2 Power Supply & Charging	3
1.3 Basic Use	4
1.4 Accessories	5
1.5 System Main Interface and Major Functions	6
Chapter II GPS	8
2.1 Map	8
2.2 Navigation	8
2.3 Reception	8
Chapter III Media	9
3.1 Music Player	9
3.2 Video Player	12
3.3 Photo Browser	15
3.4 E-book Reader	17
Chapter IV Bluetooth	22
4.1 Pair	22
4.2 Outgoing call	23
4.3 Incoming Call	26
4.4 Dial Record	26
4.5 Redial	27
4.6 Setting	27
4.7 Paired Device List	28
4.8 Dialup Networking Service	29
4.9 Search	31
4.10 Phonebook	33
Chapter V Games	34
5.1 Othello	34
5.2 DuiDuiPeng	35
5.3 Russia Block	35

Contents

Chapter VI Tools	36
6.1 Calculator	36
6.2 Unit	37
Chapter VII Setting	38
7.1 Summary	38
7.2 Volume	39
7.3 Backlight	40
7.4 Language	41
7.5 Date& Time	42
7.6 Calibration	43
7.7 FM Transmitter	44
7.8 USB	45
7.9 Navigation Path	48
7.10 Restoring the Factory Setting	49
7.11 System Info	49
Chapter VIII GPS Info	50
Chapter IX Troubleshooting	51

Welcome

Thanks for using the P-110. It is featured with navigation function, audio & video play, photo browsing and e-book functions.

- ✓ SiRF Atlas- IV CPU with high performance and low power consumption
- ✓ Friendly user interface for simple operation
- ✓ Power management for longer and more stable operation
- ✓ Data transmission with computer via Mini USB
- ✓ Quality reception, accurate positioning and satisfactory navigation service
- ✓ Leisure friend with audio/video/amusement functions

You may use the GPS navigator anytime anywhere, for example while driving, walking or cycling. Let its navigation and amusement functions enrich your life and work!

To realize the functions of P-110 and to understand the operation details, please read the manual carefully.

You may see the following supplemental information in the manual.

[Note]: Explanation of relevant subjects

[Relevant Information]: Extra information of relevant subjects

[Attention]: Precautions or warnings of relevant subjects. Please pay attention to this information and follow the instructions to avoid devastating influence on yourself and others.

[*]: Optional function

This manual is applicable only to the P-110.

Chapter I Beginning Use

This chapter introduces the appearance, components and basic operations of P-110.

1.1 Appearance

The product picture below is subject to the material object.



SN	Component	Explanation
1	Power key	Powering on/ off and sleep
2	Indicator light	Indicating the operating state of external power supply
3	Microphone	For voice input of Bluetooth function
4	Touch pen slot	Location of the touch pen
5	Earphone jack	Connected with the stereophone
6	T-flash card slot	T-flash card inside
7	MINI USB port	Communicating with PC via MINI USB cable and used as the charging port and supports TMC


SN	Component	Explanation
8	Speaker	Playing sounds (such as navigation prompt tones, music, etc.)
9	Light sensor	Realize automatic backlight adjustment
10	Reset key	Restart the system

1.2 Power Supply & Charging

Charge the GPS navigator fully with the charger before first use.

1.2.1 Power Supply

The P-110 can be powered by the built-in battery or external power supply.

When the GPS navigator is unconnected to the charger, it is powered by the Li-polymer battery. The battery capacity icon  in the system main interface shows current residual battery capacity.

When the GPS navigator is connected to the charger, it is powered by external power and the battery is charged.

[Attention] The GPS navigator adopts internal non-removable Li-polymer battery. To avoid battery rupture, explosion, release of hazardous substance or burn, do not unpack, pierce, strike on or discard the battery in fire or water.

1.2.2 Charging by Car Charger

The GPS navigator must be charged with the charger before first use.

Plug one terminal of the car charger into the USB port of the GPS navigator and the other to the charging port to supply power and charge the GPS navigator.

[Note] The charging indicator light is red during charging. Do not unplug the charge until the battery is fully charged and the indicator light turns green. Please charge the GPS navigator when the battery is low or used up.

[Note] To avoid damage due to current surge, plug in the car charger after the automobile is started.

1.3 Basic Use

1.3.1 Powering on/off & Sleep

1.3.1.1 Powering on

Press the power key of the GPS navigator and let go after at least two seconds to power it on.

[Note] Great humidity fluctuation may lead to short circuit of the GPS navigator. Power on the navigator after it has accommodated to new environment.

1.3.1.2. Powering off & Sleep

Press the power key and let go after at least two seconds to power off the GPS navigator. The following interface will be prompted. If **Sleep** is selected, the navigator will automatically resume the state before entering sleep mode when it is powered again.



1.3.2 Restarting the System

When the system does not response, press the reset key on the back of the

GPS navigator to restart the system.

[Relevant Information] The following situations might lead to no response of the system.

1. Delay or pause in interface switching;
2. Failure of function activation with overlong execution;
3. Failure to power on/off the GPS navigator by pressing the power key.

[Note] Restarting the system by pressing the reset key will result in loss of unsaved data. Please backup your data regularly.

1.3.3 Fixing the GPS Navigator with Mounting Kit

The mounting kit is composed of a back splint and a bracket. To use the GPS navigator in an automobile, fix it on the dashboard under the front windshield.

[Note] Do not place the GPS navigator in positions obstructing the driver's vision. Do not place it without fixing it, or in the place of air bag or the area after the air bag is inflated.

1.3.4 Using T-FLASH Card

Copy mapping applications, map data and media files in a T-FLASH card. Insert the card in the corresponding slot.

[Note]

1. Do not take out the T-FLASH card while an navigation program is being run or a media file is being played.
2. To avoid drop or crash of the T-FLASH card, do not exert heavy pressure on it or bend it.
3. Avoid using or storing the T-FLASH card in high temperature, high humidity or direct sunlight. Keep the card away from liquid or corrosive substance.
4. Mind the direction while inserting the T-FLASH card to avoid damaging the slot or the card.

 
1.4 Accessories


Please find in the package the following accessories.


Car charger	1 pc	User manual	1 pc
Stylus	1 pc	Warranty card	1 pc
Cradle	1 pc	USB cable	1 pc
Bracket	1 pc		

1.5 System Main Interface and Major Functions

Long press the power key on the top side of the GPS navigator to enter the system main interface shown below.

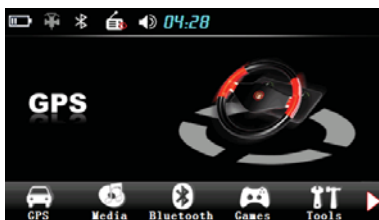

 View the functions of next page by pressing  at the bottom of the interface.

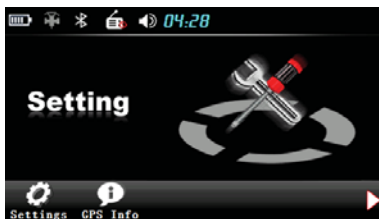

Tap a function icon at the bottom to enter the next function menus. The main functions are listed as below.

Function	Explanation
GPS	Tap to enable navigation function
Media-Music	WMA9 and WAV files supported; Random, sequence and cycle play supported
Media-Video	WMV, ASF and AVI files supported; Adjustment of playing progress, pause and full-screen play supported
Media-Photo	JPG, GIF, BMP and PNG files supported; Photo rotation, zoom in/out and auto play supported
Media-E-book	TXT files reading supporting page selection
Bluetooth	Enable wireless connection between the GPS navigator and a Blue-tooth mobile phone
Games	Othello, DuiDuiPeng, Russia Block, Lianliankan, BoxMan, Gobang, Snake, JawBreaker and BreakOut
Tools	Calculator and Unit
Setting	Volume, backlight, language, date& time, calibration, FM transmitter and system info, USB, navigation path and factory reset
GPS Info	Display GPS information

Chapter II GPS

Various navigation mapping applications can be installed in the GPS navigator, such as Ndrive intelligent navigation systems, which position the navigator via the satellite receiver and display it on the map. Set a destination, and the system will automatically work out the best path to help the user reach the destination safely and quickly.

2.1 Map

Due to transportation development, inconformity between products and real traffic information will occur a period after product release. Please drive according to road condition and abide by traffic regulations.

2.2 Navigation

Navigation paths are for reference only, and the user may decide whether to follow them.

2.3 Reception

High and crowded structures (such as inside of tunnels, space between high buildings, underground car parks and under viaducts), weather change or satellite signals turnoff may influence signal reception, resulting in positioning failure, inaccurate positioning, navigation failure or system function abnormality.

With stereoscopic maps, instant animation, voice prompt and text prompt of the navigation system, you will appreciate its unique charm and enjoy a great trip.

Different navigation maps may have different operation methods. Please follow instructions of corresponding navigation mapping applications.

[Note] Before using the GPS navigator, please purchase and install mapping applications and appoint file paths. For setting methods please refer to 7.9 *Setting Navigation Path*.

Chapter III Media

The Media function include the music player, video player, photo browser, e-book reader and flash player.

3.1 Music Player

This section introduces the usage of the music player.

3.1.1 Features

 
The music player supports WMA9 and WAV files and selection of play sequence.

Copy audio files to a folder in your memory card before using the player.

3.1.2 Interface and Operation



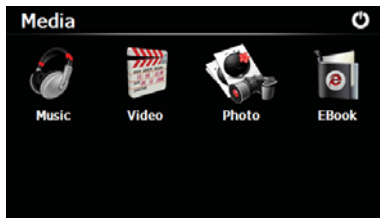



Tap **Media** in the system main interface to enter the **Media** interface as shown below.



 
Tap **Music** to enter the **Music Play** as shown below.









Icon	Name	Explanation
	Close	Close the music player.
	Minimize	Minimize the music player and return to the Media interface.
	Play	Continue playing the paused/ stopped music.
	Pause	Pause the music being played.
	Stop	Stop the music being played.
	Set play sequence	Select sequence, random or cycle play.
	Previous	Play the previous music.
	Next	Play the next music.
	Volume	Drag it leftward to turn down or rightward to turn up the volume.

Icon	Name	Explanation
	Progress	Drag it leftward or rightward to play from a previous or future moment.
	Music list	Enter it to select music to play.
	Time	Display the run time.
	Equalizer	Enter the equalizer.

Tap  in the interface **Music Play** to enter the **Music list** shown as below.



Icon	Name	Explanation
	Close	Close the Music List .
	Scroll bar	Drag it upward/ downward to view all music.
	Add one	Add a piece of music on the left list to the play list on the right.
	Add all	Add all the music on the left list to the play list on the right.
	Delete one	Select one piece of music in the play list and tap the icon to delete it.
	Delete all	Delete all the music in the play list.

3.2 Video Player


This section introduces the usage of the video player.

3.2.1 Features

The video player supports WMV, ASF and AVI files, full-screen play, progress selection and file selection.









Copy video files to a folder in your memory card before using the player.

 
3.2.2 Interface and Operation


Tap  in the **Media** interface to enter the video player interface shown


as below.






Icon	Name	Explanation
	Close	Close the video player.
	Previous film	Play the previous film.
	Play	Continue playing the paused/stopped music.
	Next film	Play the next film.
	Stop	Stop the film being played.
	Video folder	Enter it to select a film to play.
	Progress	Drag the sliding block leftward to play from a previous moment or rightward coming moment.
	Volume	Drag it leftward to turn down or rightward to turn up the volume.

Icon	Name	Explanation
	Time	Display the play time and the music duration.

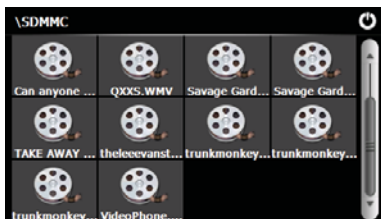 Tap  in the **Video Player** interface to enter the video folder shown as below.



Icon	Name	Explanation
	Close	Close the video folder.
	Scroll bar	Drag the sliding block upward/downward to view all the files inside the folder.
	Film name& format	Film name and its format

3.3 Photo Browser

This section introduces the usage of the photo browser.

3.3.1 Features

The photo browser supports JPG, GIF, BMP and PNG files, photo rotation, zoom in/ out and auto play.




Copy photos to a folder in your memory card before using the browser.






3.3.2 Interface and Operation




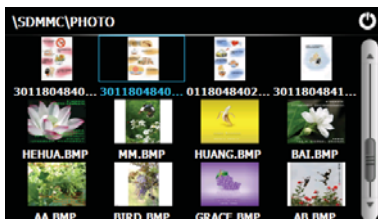 
Tap **Photo** in the **Media** interface to enter the photo browser interface shown as below.






Icon	Name	Explanation
	Previous	View the previous photo in the folder.
	Next	View the next photo in the folder.
	Zoom in	Scale up current photo.

Icon	Name	Explanation
	Zoom out	Scale down current photo.
	Rotate	Rotate current photo 90° clockwise.
	Auto play	Cycle play all the photos in the folder from current photo.
	Folder	Enter the photo folder to select a photo.
	Close	Close the browser and return to the Media interface.

Tap  in the browser interface to enter the photo folder shown as below.



Icon	Name	Explanation
	Close	Close the current folder.
	Return	Return to the previous folder.
	Scroll bar	Drag the sliding block to view all the photos.

3.4 E-book Reader

This section introduces the usage of the E-book reader.

 
3.4.1 Features


The reader supports TXT files, page turn and folder selection.







 
Copy TXT files to a folder in your memory card before using the browser.


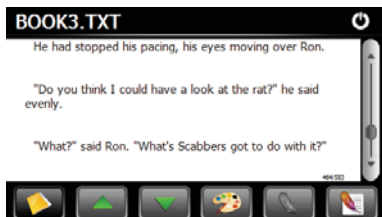
3.4.2 Interface and Operation



  
Tap  in the **Media** interface to enter the reader interface shown as below.








Icon	Name	Explanation
FUCHEN.TXT	File name& format	Current file name and format
	Close	Close the reader.
	Scroll bar	Drag the sliding block upward/downward to view all content of the e-book.
	Folder	Enter the e-book folder to select an e-book to read.
	Previous	Read the previous page.
	Next	Read the next page.
	Setting	Select a text theme, font, word size and bold type.
	New bookmark	Select partial text and tap the icon to create a bookmark.

Icon	Name	Explanation
	Bookmark list	Enter the bookmark list to select or delete a bookmark.
	Page/ total pages	Current page/ total pages





Tap  in the e-book reader interface to enter the setting interface shown as below.






 
Icon	Name	Explanation
	Close	Exit the setting interface.
	Save	Save the setting.
Theme	Theme	Tap  to select a theme for the e-book.
Font	Font	Tap  to select a font for the e-book.
 Bold	Bold	Tap to enable bold type. Tap it again to cancel.


Tap  in the e-book reader interface to enter the e-book folder shown as below.



Icon	Name	Explanation
	Close	Close current folder
	Return	Return to the previous folder.
	Scroll bar	Drag the sliding block upward/ downward to view all TXT files.
	File name& format	The file name and format.


To create a bookmark, locate a page by taping  or  or dragging the scroll bar in the reader interface and drag to select text content. Tap  when it is on. Tap **OK** to finish.

 
Tap  to view created bookmarks in the interface of **Bookmark List** shown as below.

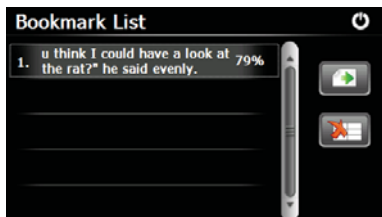


Drag the scroll bar and select a bookmark on the left list. Tap  to go to the page with the bookmark or tap  to delete the bookmark.

 
Chapter IV Bluetooth

 In the main interface, tap  to enter the Bluetooth interface as follow.
At the bottom is the connection status bar.

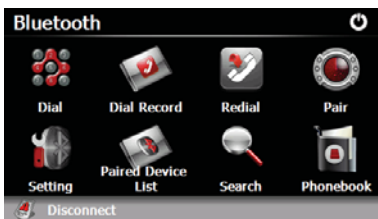


4.1 Pair

 Tap  to enter the following interface to pair with mobile phone
(mobile phone's Bluetooth function should be enabled beforehand).

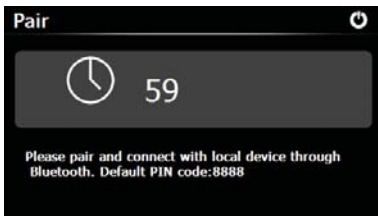

 Notice: Please keep the Bluetooth mobile phone around the PND while pairing them.

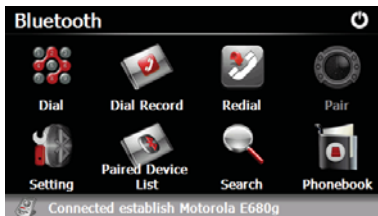

After successful pairing, the message "Connected established" and the mobile phone name will be shown in the interface as below.

 


4.2 Outgoing call

Tap  to enter the phone keyboard interface as below.



Tap on the keyboard to enter a phone number. Tap  to delete the last number entered. Tap  to generate a call as shown in the following interface.

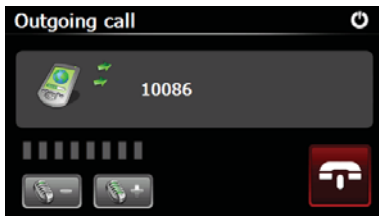

Volume down

Tap it to turn down the volume.



Volume up

 
Tap it to turn up the volume.



Hang off

Tap to hang off.

When the called number is put through, the interface will be as below.

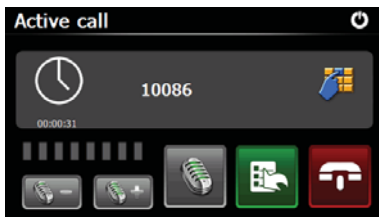Volume
down

Tap it to turn down the volume.



Volume up

Tap it to turn up the volume.



Mic

Tap to input voice.

Volume
switch

Switch the voice output to the mobile phone.



Keypad

Tap it to open the keypad as shown in the interface below.

 


Hang off

Tap to hang off.




If the call fails, the below interface will be prompted.

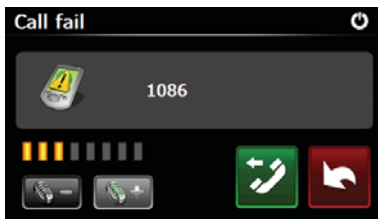


4.3 Incoming Call

 When there is incoming call, the following interface will be prompted.

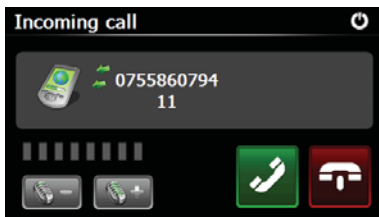

4.4 Dial Record

Tap  in the Bluetooth interface to enter the dial record interface as shown below.



Outgoing call Tap it to view the list of called numbers records



Incoming call Tap it to view the list of incoming call numbers records



Failed call Tap it to view the list of failed calls.
records



Delete one Select a number in the list and tap this icon
to delete it.



Delete all Select all the numbers in the list and tap
this icon to delete it.



Generate Select a number in the list and tap this icon
to generate a call.

4.5 Redial

 






In the Bluetooth interface, tap to redial the last dialed number.

4.6 Setting

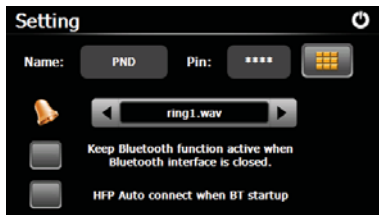

 In the Bluetooth interface, tap to enter the setting interface as shown below.



Name: PND	Name The device's display name in the Bluetooth transmission process.
	Pin Tap to set a pin code for the connection code between the PND and mobile phone.
	Ring Tap  /  to select a ring tone.

You may choose to keep Bluetooth function when the Bluetooth interface is closed by ticking in the box. Otherwise, the Bluetooth function will be disabled.

You may also choose automatic HFP connection when Bluetooth is started up by ticking in the box.

4.7 Paired Device List

In the Bluetooth interface, tap  to enter the Paired Device List interface as shown below.





 
Profile list Select a paired device from the list on the left and tap this icon to view the profile list as shown in the following interface.



Delete one Tap this icon to delete the .



Disconnect Tap it to disconnect the PND from the mobile phone.

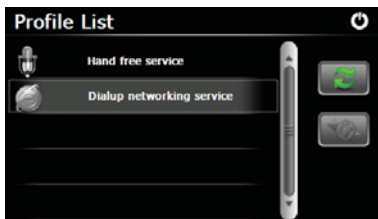

Select a profile from the list, and then:



Connect Tap it to reconnect the PND with the mobile phone.




Disconnect Tap it to disconnect the PND from the mobile phone.

4.8 Dialup Networking Service

In the above interface, tap  to prompt the GPRS Dial-up Networking interface as shown below.



4.8.1 Operator Info Edit

You may add, modify or delete the operator information. Tap  to prompt the following interface.

 


Select an option, for example “Modify Info”, and tap “OK” to go to the interface as shown below.




Tap in a column, enter information with the prompted input panel and then tap “OK” to save the input information or tap “Cancel” to quit.


4.8.2 Dialup Networking Service


In the GPRS Dial-up Networking interface, tap  to connect the navigator to the network. After connection is established, the Internet Explorer interface will prompt as shown below.





4.9 Search

 In the Bluetooth interface, tap  to enter the following interface and the device will automatically search and display a list of Bluetooth devices.

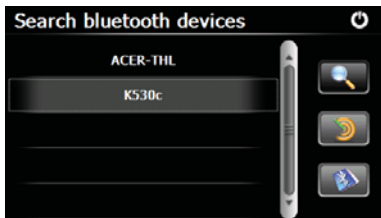

 Select a device from the left list and tap  to pair with it. If fail, the following interface will be displayed.

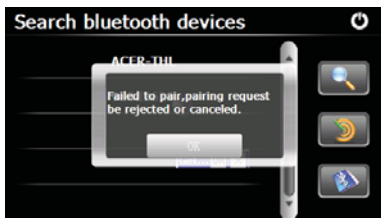

You may also tap  to enter the interface of Paired Device List as below. Please refer to Part 4.7 *Paired Device List* for details.



4.10 Phonebook

Tap  to enter the phonebook interface as below.



Download Download the phonebook of the mobile phone to the PND.



Dial Select a number from the phonebook and tap this icon to generate a call.



 
Delete Select a number from the phonebook and tap this icon to delete it.

Chapter V Games


This chapter introduces the usage of Games.


Tap  in the system main interface to enter the games interface as

shown as below. Tap  to exit.

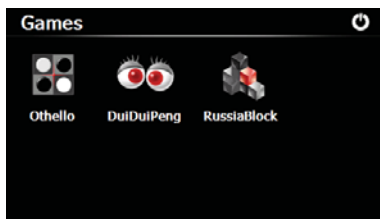


5.1 Othello

 Tap  in the Games interface to enter the interface as shown below.

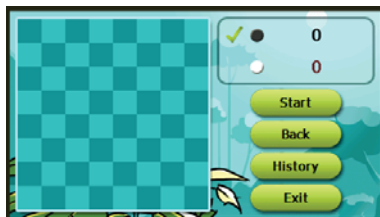

5.2 DuiDuiPeng




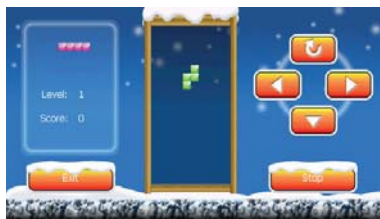 
Tap  in the Games interface to enter the interface as shown below.



5.3 Russia Block





 
Tap  in the Games interface to enter the interface as shown below.




Chapter VI Tools

The tools include Calculator and Unit conversion.

Tap  in the system main interface to enter the tools interface as shown below. Tap  to exit.

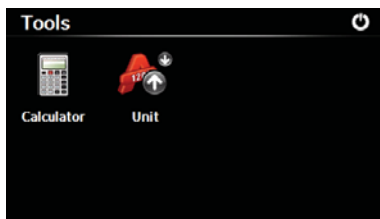


6.1 Calculator

 
Tap  in the **Tools** interface to enter the calculator interface as shown below.



6.2 Unit



Tap  in the **Tools** interface to enter the unit converter interface as shown below.

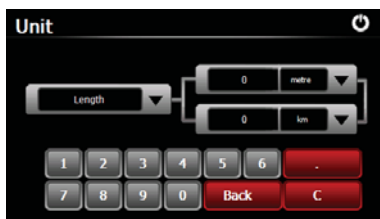


Chapter VII Setting

7.1 Summary


This chapter introduces the setting of the GPS navigator.



 Tap **Setting** in the system main interface to enter the setting interface to set volume, backlight, language, date & time, calibration, factory settings, system info, USB and navigation path.

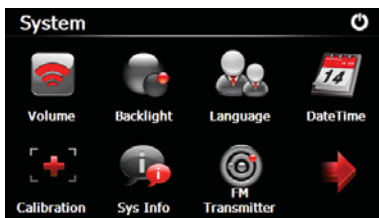

 
View the functions of next page by pressing at the bottom of the interface.

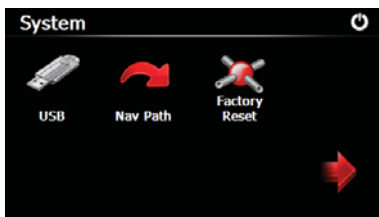


Function	Explanation
Volume	Adjust the speaker volume; enable/ disable sounds for tap; set startup music.
Backlight	Adjust the brightness of touch screen backlight; set the interval of auto backlight off under power supply.
Language	Select a system language.
Date & time	Set the system date, time, and time zone.
Calibration	Calibrate the screen when position deviation occurs.
System info	Display system information including ROM version, software version, OEM version, platform ID and device ID.
FM Transmitter	Transmits audio signals of the navigator to the radio set via frequency modulation.
USB setting	Set the data transmission mode between the navigator and computer.
Navigation path	Select a navigation path for the navigator.
Factory reset	Restore the factory settings.

7.2 Volume



 Tap  in the setting interface to enter the volume setting interface as shown below.

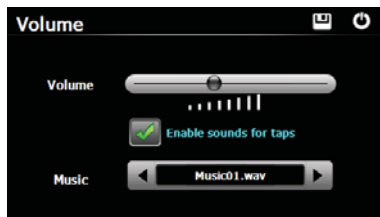


Close

Exit the volume setting.



Volume

 Ten volume grades (from mute to maximum) available. Tap to decrease the volume by grade.





Sounds for
taps

Tap it to enable the function. Tap it again to disable the function.



Power-on
music

Tap  or  to select power-on music or disable it.

7.3 Backlight

Backlight setting includes backlight brightness adjustment and latency of backlight off.



Tap **Backlight** in the setting interface to enter the backlight setting interface as shown below.





Close Exit the backlight setting.




Backlight Drag leftward to turn down or rightward to turn up the backlight.






Auto off Auto backlight shutoff after service stop for a period. The options are always On, 10s, 30s, 1m, 2m and 3m. Tap  or  to view the options in cycle or select one.

7.4 Language




Tap  to enter in the setting interface to enter the language setting interface as shown below.



Tap  or  to select a system language and tap  to save the selection.

7.5 Date& Time



Tap  to enter in the setting interface to enter the language setting interface as shown below.

Date & Time setting includes system date setting, time setting and time zone setting.





7.5.1 Setting the system date and time

In the above interface, tap  or  to set the year, month, day, hour and

 
minute.


[Note]: Time format options are 12-hour and 24-hour. You may select one of them.

7.5.2 Setting the system time zone

In the above interface, tap  or  to select a time zone. For example, select “(GMT+08:00) Beijing, Chongqing, Hong Kong, Urumqi” for China.

7.6 Calibration

 Tap  in the setting interface to prompt the calibration dialog shown as below.

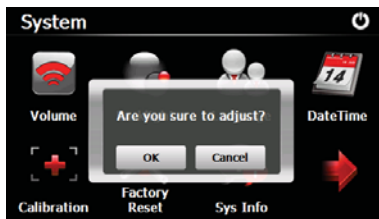

Tap **OK** to execute calibration or **Cancel** to cancel calibration and go back to the setting interface.

Tap **OK**, and the following calibration interface is prompted. Click the center of cross cursor with the touch pen and the cursor shifts from the center, upper left, lower left, upper right and lower right to finish the calibration and the interface will be closed automatically to go back to the setting interface.


Please tap on the crosslines firmly
The crosslines will continue to move until
the screen is aligned.

 


7.7 FM Transmitter

FM transmitter realizes transmission of audio signals of the GPS navigator to radio sets. Adjust the emission frequency of the GPS navigator the same as that of the receiving frequency of the radio, and sounds of the navigator will be output by the amplifier system of the radio sets.



Tap  in the setting interface to enter **FM Setting** shown as below.

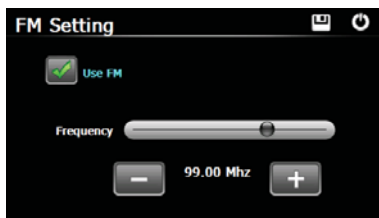

Close

Exit the FM Setting.





Save

Save current setting.



Use FM Tick in the box to enable FM function.



Frequency Drag the slide block rightward (or tap ) to increase the frequency and leftward (or tap ) to reduce the frequency. The frequency range is 88.00 Mhz-108.00 Mhz.

7.8 USB


Connect the GPS navigator to PC via the MINI USB port to transmit data, or back up data from the navigator data to PC.

 
The GPS navigator provides MASS STORAGE and MS STORAGE modes. Select one in the USB setting.

7.8.1 MASS STORAGE

1. Have the GPS navigator in operation status and the SD card plugged in the slot;



2. Tap  in the setting interface to enter **USB Option** as shown below.

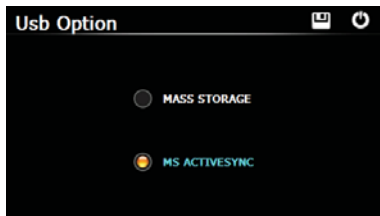

Select **MASS STORAGE** and tap  to save it.

3. Connect the MINI USB terminal of the USB cord to the MINI USB port of the GPS navigator and the standard USB terminal to the USB Host port of PC. Then, the computer will recognize the navigator and prompt the following interface.



To disconnect the navigator from PC and enter charging mode, you may tap

 



5. After communication, unplug the MINI USB cable.

7.8.2 MS ACTIVESYNC



1. Tap **USB** in the setting interface to enter **USB Option** as shown below.

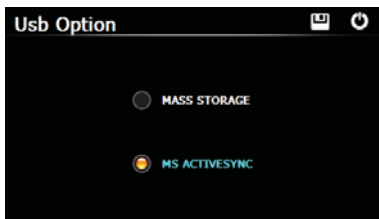

Select **MASS ACTIVESYNC** and tap  to save the setting.

2. Install the application **Mobile Device** in a drive of PC. Then the following icon will appear in the drive selection.



3. Connect the MINI USB terminal of the USB cable to the MINI USB port of the GPS navigator and the standard USB terminal to the USB Host port of PC.
4. After the PC finds new hardware, double click the Mobile Device drive in the selection area to enter the memory of GPS navigator for data transmission.
5. After transmission, unplug the USB cable.

[Attention] For data safety, please back up your system data in external storage. Our company has no responsibility for lost or damage of system data.


[Note] If MASS STORAGE is selected while the GPS navigator is

connected with PC, other operations will be suspended.

[Attention] The following operations will stop suspend the communication of the system and PC and unsaved data will be lost.

1. Unplugging the MINI USB cable;
2. Powering off the GPS navigator;
3. Resetting the system;
4. Tap the on close button on the top right.

7.9 Navigation Path

Insert a T-flash card with map data into the GPS navigator and tap  to enter the interface shown as below.



Select a map address and tap  to save the setting.

Navigation...

Tap to select a map address.

 


Tick in the box to run the set navigation map when the navigator is powered on.

7.10 Restoring the Factory Setting



Tap **Factory Reset** in the setting interface to restore the factory setting. The following dialog will be prompted.

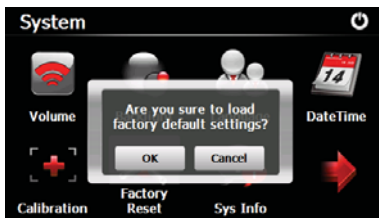

Tap **OK** to restore the default setting or **Cancel** to return to the setting interface.


7.11 System Info

 


Tap **Sys Info** in the setting interface to view the system information as shown below.



Chapter VIII GPS Info

Tap  on the system main interface to view the GPS information as shown below.

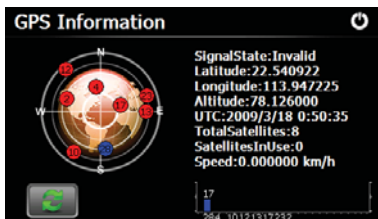

To reset the GPS satellite receiver, tap  to prompt a dialog as below.



Tap **OK** to reset the GPS satellite or tap **Cancel** to exit

Chapter IX Troubleshooting

Please carry out the following operations in case of abnormal operation of the GPS navigator. For further problems, please contact our customer service center.

Fault	Reason	Solution
Startup failure	Low battery	Supply external power and charge the battery.
	System down	Reset the GPS navigator.
Sudden power cut	Low battery	Supply external power and charge the battery.
No/ vague display	Low backlight	Turn up the backlight.
	Backlight off	Tap the screen with the touch pan.
Incorrect tapping response	Touch screen not calibrated	Recalibrate the screen.
No sounds	Low volume	Turn up the volume.
	Poor contact of earphone	Connect the earphone.
Communication with PC	Poor USB connection	Connect the USB cable.
GPS signals reception failure	Poor GPS signal	About 3 minutes are needed for low intensity of local GPS satellite signal.
Loss of map data	Accidental deletion	Contact your agent or distributor. Input a new password after recovering the GPS data.



CNS MARKETING (PTY) LTD
TEL : (0027)11-7816001
FAX : (0027)11-7816000
WEB : www.roadmategps.co.za